TYGER®

RISER®

TG-RS6C60018

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: **WWW.TYGERAUTO.COM/CONTACT**

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

Parts List

- x1 Driver Side Riser **D**
- x1 Passenger Side Riser **P**
- x3 Driver Side Mounting Brackets **[A]**
- x3 Passenger Side Mounting Bracket **[B]**
- x12 8-1.25mm x 25mm Hex Bolts
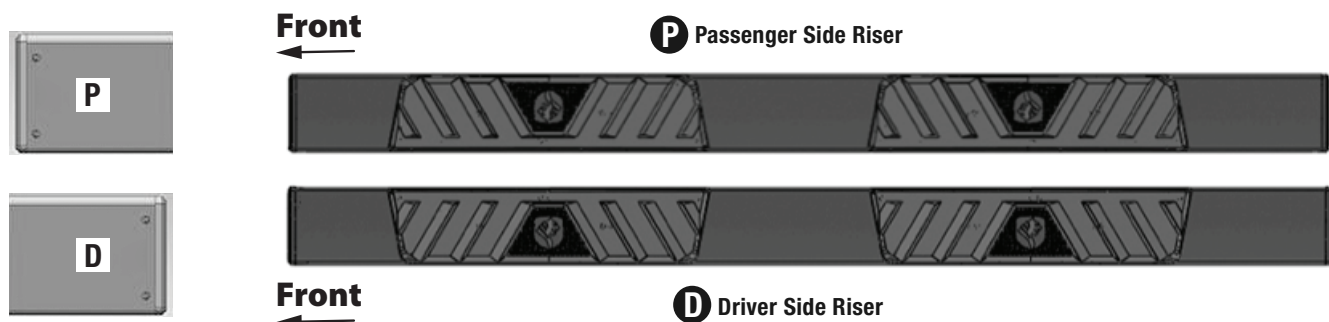- x12 8mm x 24mm x 2mm Flat Washers
- x12 8mm Lock Washers
- x12 8-1.25mm x 25mm Combo Bolts
- x12 8mm Clip Nuts

Top View

ATTENTION: Refer to **D** and **P** labelling on the side of the tubes to determine Driver and Passenger Riser

Front

P Passenger Side Riser

P

D

Front

D Driver Side Riser

x3

x3

[A]
Driver Side
Mounting Brackets
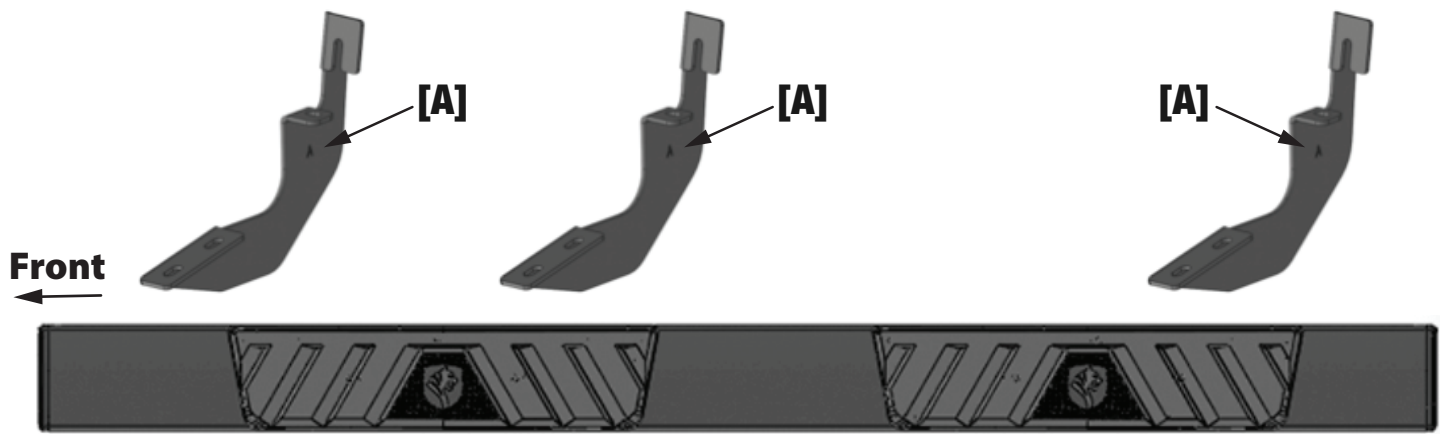
[B]
Passenger Side
Mounting Brackets

x12 Combo Bolts

x12 Hex Bolts

x12 Flat Washers

x12 Lock Washers

x12 Clip Nuts

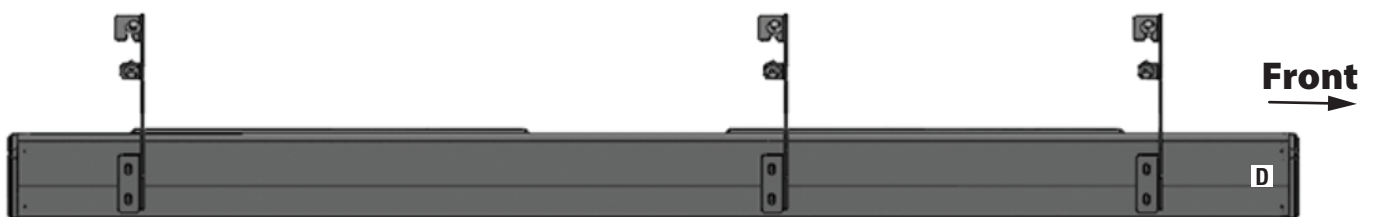**Reference the letters printed on the brackets to determine mounting locations**

[A]   **[A]**   **[A]**

Front

D Driver Side Riser

[B]   **[B]**   **[B]**
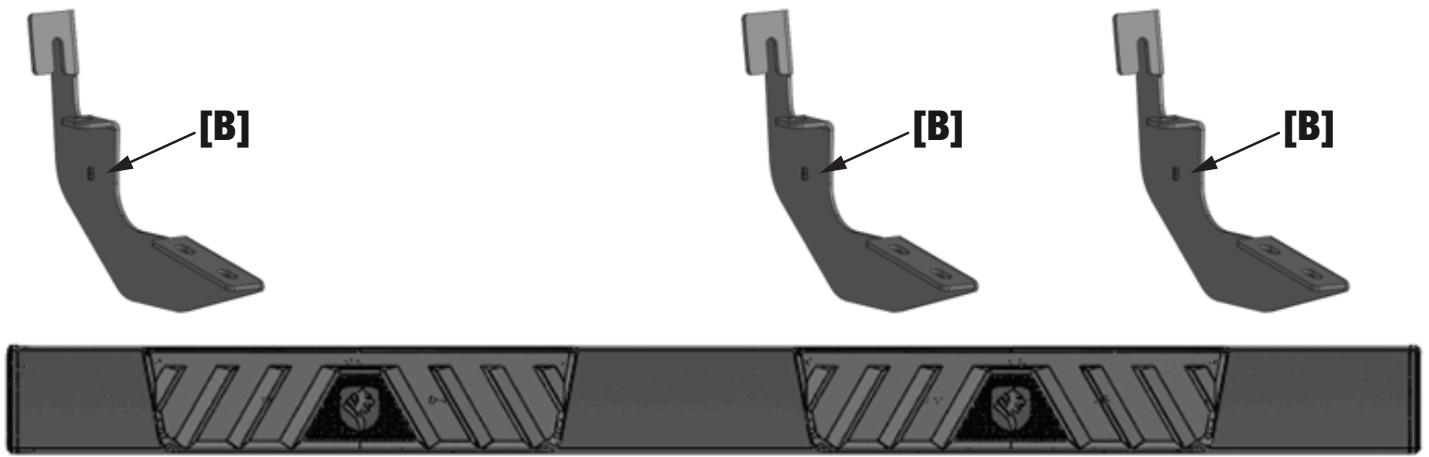
P Passenger Side Riser   **Front**

Bottom View

Front

D Driver Side Riser

Front

P Passenger Side Riser

TOOLS REQUIRED

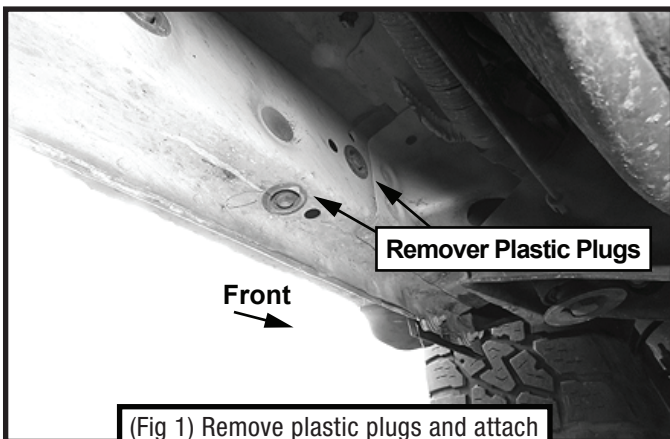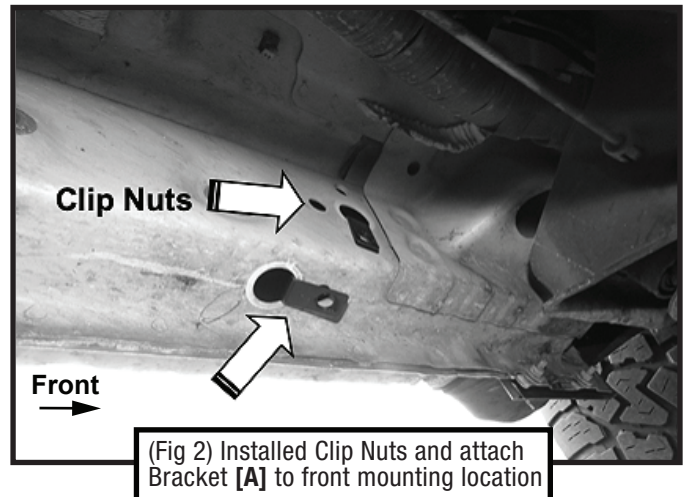|	
Ratchet	13mm Socket
Extensions	Wrench
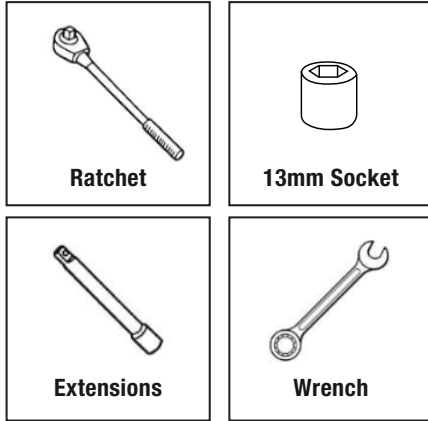
STEP 1   MOUNTING BRACKETS

Follow (Fig 1 – 8) to attach the Brackets to the Driver Side.
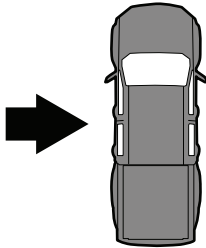
📍 Driver-side Front Mounting Area

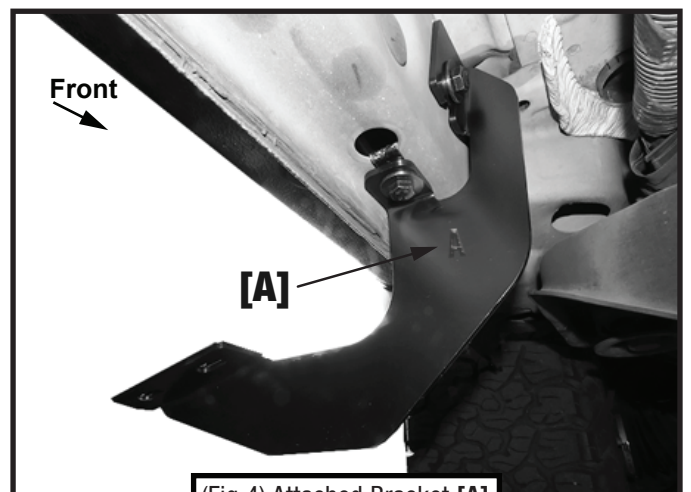(Fig 1) Remove plastic plugs and attach clip nuts to front mounting location

Remover Plastic Plugs

Front

Clip Nuts

Front

(Fig 2) Installed Clip Nuts and attach Bracket **[A]** to front mounting location

(2) 8-1.25mm x 25mm Hex Bolts
(2) 8mm Lock Washers
(2) 8mm x 24mm x 2mm Flat Washers
(2) Clip Nuts)

[A]

Front
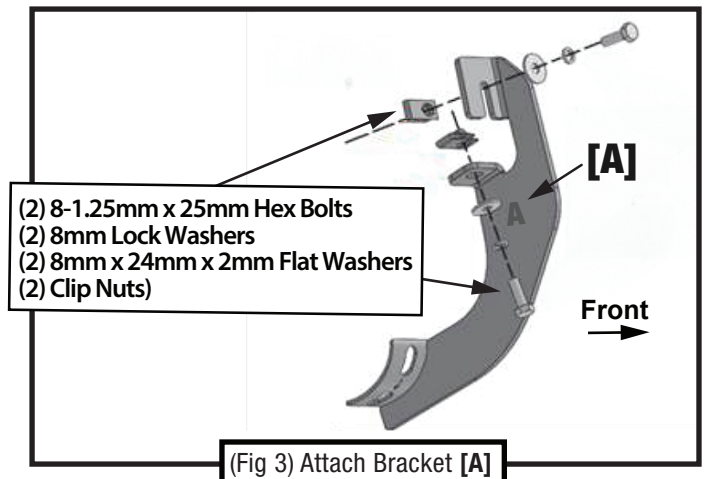
(Fig 3) Attach Bracket **[A]**

Front

[A]

(Fig 4) Attached Bracket **[A]**

Driver-side Center Mounting Area

Remover Plastic Plugs

Front

(Fig 5) Attach Clip Nut and Bracket **[A]** to center mounting location

Front

[A]

(Fig 6) Attached Bracket **[A]**
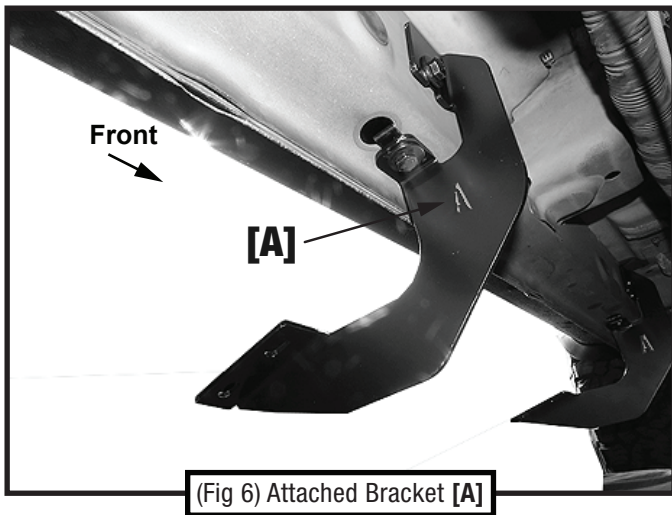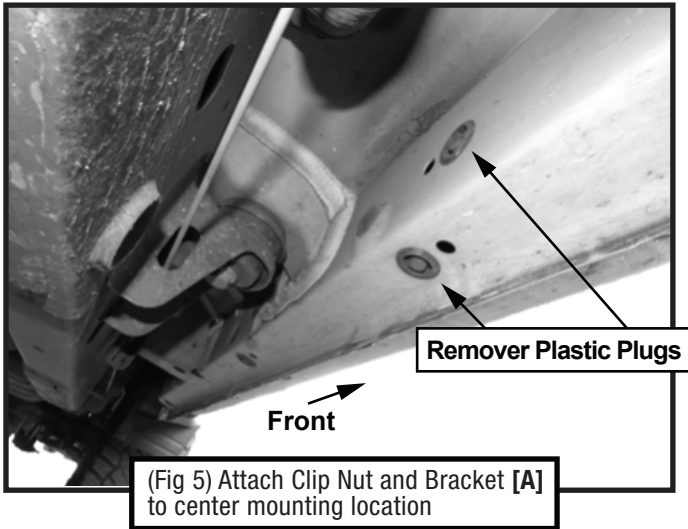
Driver-side Rear Mounting Area

Remover Plastic Plugs

Front

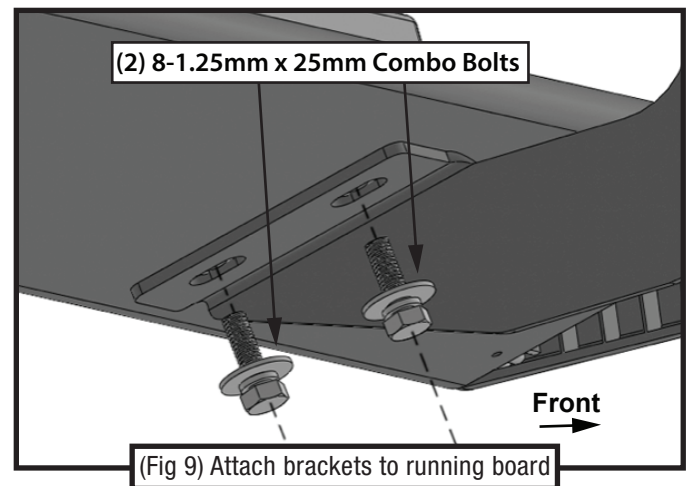(Fig 7) Attach Clip Nut and **[A]** to rear mounting location

Rear

[A]

(Fig 8) Attached Bracket **[A]**
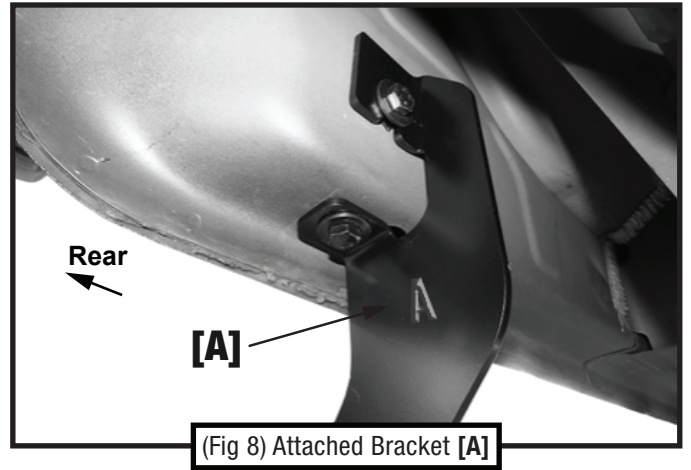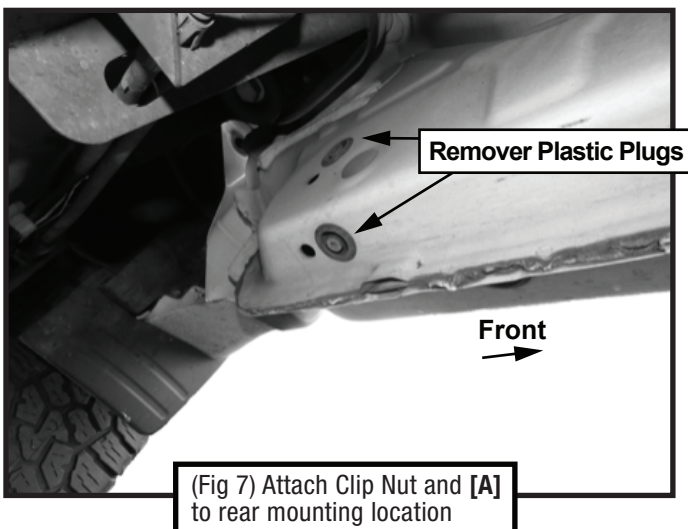
STEP 2 MOUNTING RUNNING BOARDS

Follow (Fig 9) to install the Driver Side Running Board onto each installed Bracket.

(2) 8-1.25mm x 25mm Combo Bolts

Front

(Fig 9) Attach brackets to running board

STEP 3 PASSENGER SIDE

Repeat **STEPS 1-2** for passenger side installation. Use Brackets **[B]** instead of **[A]**.
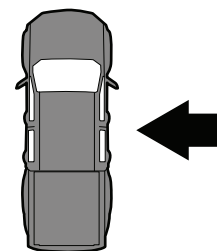
STEP 3

Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

Complete Installation